


ORDERING THE RIGHT SIZE WINDOW UNIT

1. Measure Room To Find Area

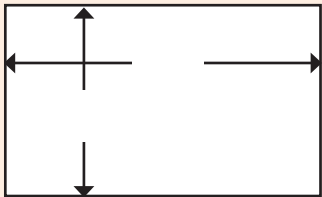


— — —

2. Match Area to BTUs

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

3. Choose Unit Type

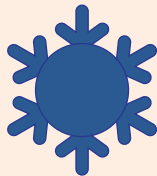

Straight Cool

